

取り付け説明書

ナポレオンリゼットミラー

AMS-102-10
AMS-102-8
AMS-104-10
AMS-104-8

本品は右側用です。左側で使用する時は「組み替え」が必要です。付属のレンチで簡単に組み換えられます。

TANAX
タナックス株式会社

KT1523001

How to install

1. Prepare the attached wrench and the 17mm spanner before work.
2. Install the mirror in the mirror installation part of motorcycle.
And tighten the stay lock nut with 17mm spanner and fix it.
3. When the ball joint part is loose, fasten the stay lock bolt with the attached wrench.

⚠ Attention

- Fasten the ball joint part moderately so that it can turn by contact or so on.
- Don't use oil or grease for the joint part.
- This ware is for the right side use. When used in the left side, recombination is necessary.

取付方法

★作業の前に付属のレンチと
17mm スパナをご用意ください。


- ① オートバイのミラー取付部にミラー本体を取り付け、17mm スパナでステーロックナットを締め込んで固定します。
- ② ボールジョイント部が緩い場合は、付属のレンチでステーロックボルトを締め込んでください。

⚠ アングル調整時の注意

- ボールジョイント部は強く締め切らず接触等で回転する程度にしてください。
- ジョイント部にオイル、グリス等を使用しないでください。

スペーサーの使用方法


ミラー取付の際に、周囲のリザーバタンク等が干渉し上手く装着出来ない場合があります。その時に付属のスペーサーを使う事で突起物を回避する事が出来る場合があります。

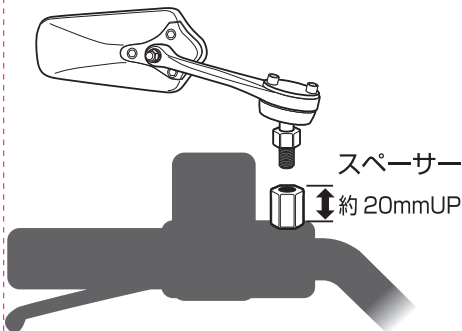

右側用→左側用に組み換え


本品は「右側」仕様に組み上げられています。
「左側」で使用する場合には下図の手順により「組み換え」を行ってください。

- ① 付属のレンチでステーロックボルトを緩め、ステーを外します。
- ② ハウジングを付けたままステーを反転します。
- ③ ステーの角度を決めたらステーロックボルトを締めて固定します。

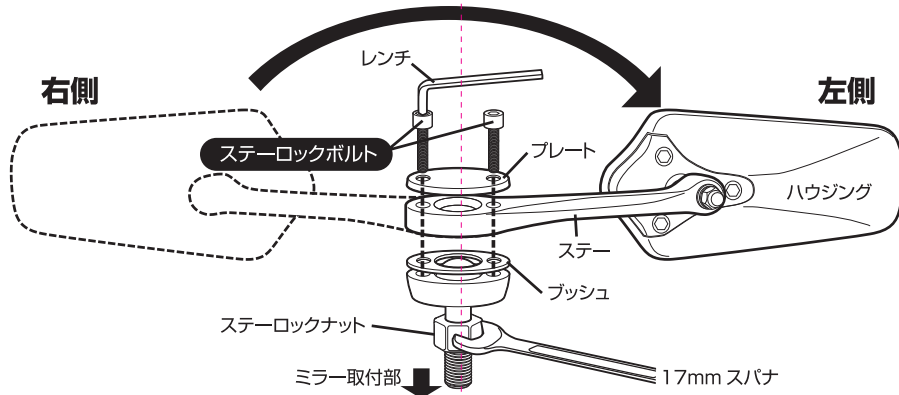

ミラーアングルの調整

ミラーのアングル調整は①と②の2カ所の「ボールジョイント部」で行う事ができます。後方を見やすい角度に調整し、ロックボルトを付属のレンチで固定します。

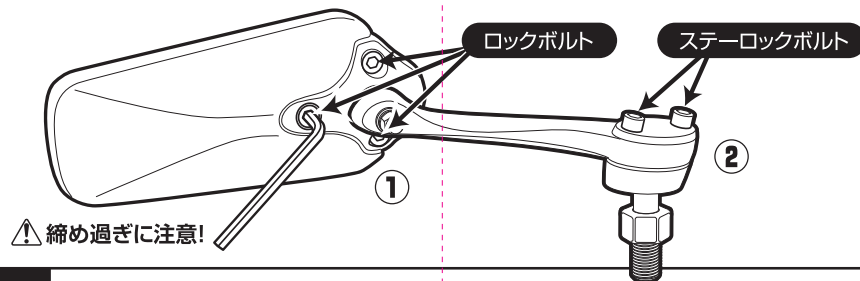

⚠ 注意

ステーが平行になる様にバランスよく均等に締め込んでください。
また、過度な締め過ぎは故障や破損の原因となりますので絶対に行わないでください。

